

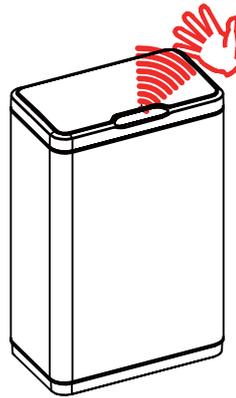


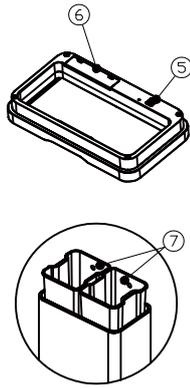

CARE AND USE INSTRUCTIONS

i.MASTER DOUBLE

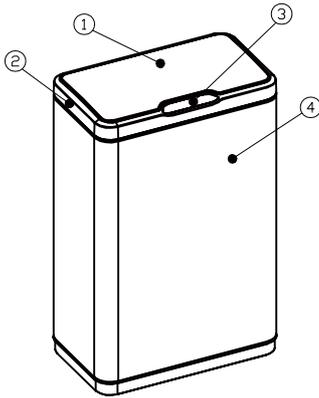

Parts list

- | | | | |
|------------------|------------------|-------------------|---------|
| 1. Flap | 2. Lid | 3. Button panel | 4. Body |
| 5. Switch button | 6. Battery cover | 7. Plastic liners | |

Functions

Effective range:

This product will sense when an object passes through the sensors range, which is about 11 in/28 cm above the panel.

Modes:

Stand-by-mode: The lid stays closed and the bin is waiting for a signal to open. A red light flashes to indicate this mode.


Sensor mode:

When the sensor unit spots the signal the lid will open. The lid will stay open as long as the signal stays in the effective range. After the object is removed from the range, the lid will close in 5 seconds.


Manual mode:

Users can open the lid by pressing the 'open' button. The lid will stay open until the 'close' button is pressed. During this mode, a red light in the middle will flash.


Battery Installation

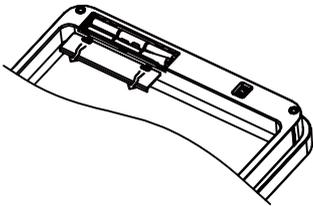

1. Open the battery cover and take out old batteries (if there is any).

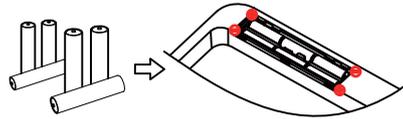

2. Install the batteries into battery box, please mind the polarity (6 x AA).

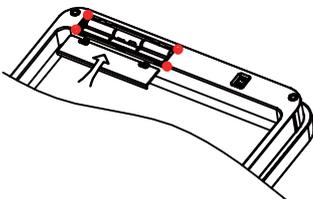


3. Push battery cover to close position, make sure the clip snaps firmly.




4. Turn on the switch button.

 
Lighting indications



Red light in the middle indicate waiting/manual mode.

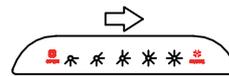

The lights turn on from left to right when the sensor spots open signal.

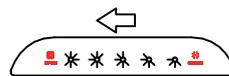

The lights turn off from right to left when the open signal is removed.

Fixing the trash bag

1. Wrap the top rim of the liner with plastic bag (please leave the handle outside for easy operation)
2. Press the excess bag into the bag fixer on the liner.

Trouble Shooting

1. No lights on: Please make sure the batteries are installed correctly or try new batteries.
2. No response from sensor: The lid may have been closed by hand in manual mode. Pressing 'CLOSE' will reset the modes.
3. Please do not try to close the lid by hand, improper operation will cause damage to the product.

Warnings & Cautions

This trash bin is intended for household use only, and should not be used for any other purpose. This is not a toy. For indoor use only. Do not expose to direct sunlight and other heat sources. Children should be supervised to ensure that they do not play with the trash bin.

Battery Warnings

Only adults should handle batteries. Do not allow a child to use this product unless the battery compartment cover is securely attached to the battery compartment. Remove batteries if consumed or if product is to be left unused for a long time.

Cautions: Battery instructions

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from equipment which is not to be used for an extended period of time.
- Remove used batteries promptly.
- For recycling and disposal of batteries to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

