




CARE AND USE INSTRUCTIONS i.MASTER ROUND

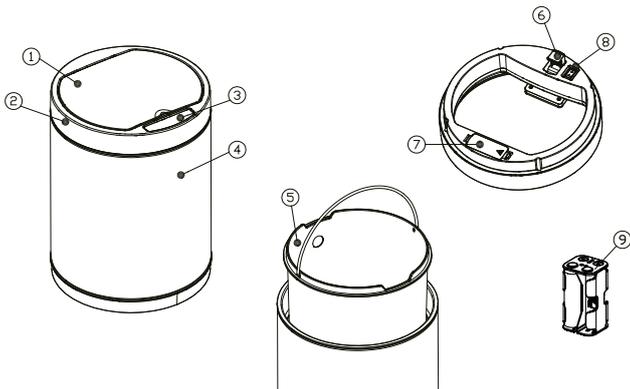

Parts list

1. Flap 2. Lid 3. Display&Touch panel 4. Body
5. Liner 6. Hanging Clip 7. Battery cover
8. Power switch 9. Battery box

Functions

Effective range:

This product will sense when an object passes through the sensor range, which is 20 cm (+/- 5 cm) above the panel.


Modes:

Stand-by-mode: The lid stays closed and the bin is waiting for a signal to open. A red light in the middle flashes to indicate this mode.


Sensor mode: When the sensor unit spots the signal, the lid will open; the lid will stay open as long as the object stays in the effective range. The flashing red light will move around the display panel. After the object is removed from the range, a digital count-down number shows on the display which indicates remain time for the close of the lid. The lid will close automatically.

Manual mode: Users can open the lid by pressing the 'OPEN' button, the lid will stay open until the 'CLOSE' button is pressed.


Batterie Installation

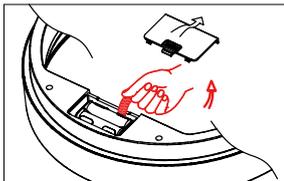


1. Open the battery cover and take out the battery box.

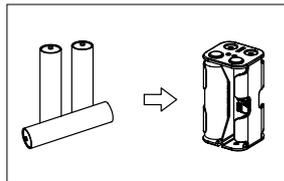


2. Insert the batteries into battery box, please mind the polarity (4xAAA – not included)

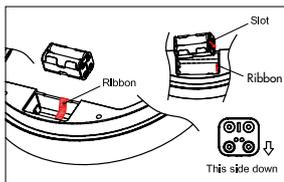

3. Put the battery box in position.

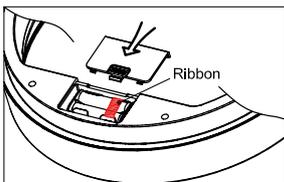

4. Push battery cover to close.

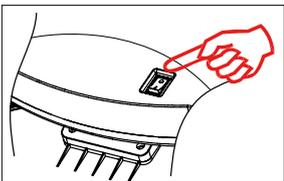


5. Turn on the switch.

Hanging clip

The clip hides in the middle of the back side of the top. Pull up and rotate it 90 degrees to hang the top. Push back the clip in normal use.

Fixing the trash bag

1. Fold the plastic bag on the top rim of the liner (please leave the handle outside for easy operation).
2. Insert the extra bag material into the bag fixing hole back on the liner.

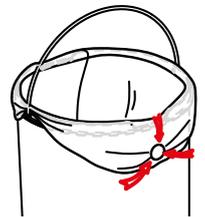

Important Safety Instructions

- This appliance is intended for household/commercial use only and should not be used for any other purpose. Any other use may invalidate the warranty and might be dangerous.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- This product contains electronic parts inside the lid, do not dip the lid into water or use corrosive liquid to clean the product. Use dry cloth to clean the operation indicator of the lid, use a soft damp cloth to clean the body and liner (rim), wipe dry with a clean cloth.
- Children should be supervised to ensure that they do not play with the appliance.

Battery instructions

- Only adults should handle batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones or batteries of different types.
- Risk of explosion if battery is replaced by an incorrect type.

Trouble Shooting

1. **No lights on** Please make sure the batteries are inserted correctly or try new batteries.
2. **No response from sensor** The lid may have been closed by hand in manual mode. Pressing 'CLOSE' will reset the modes.

